

IRON ON PATCH

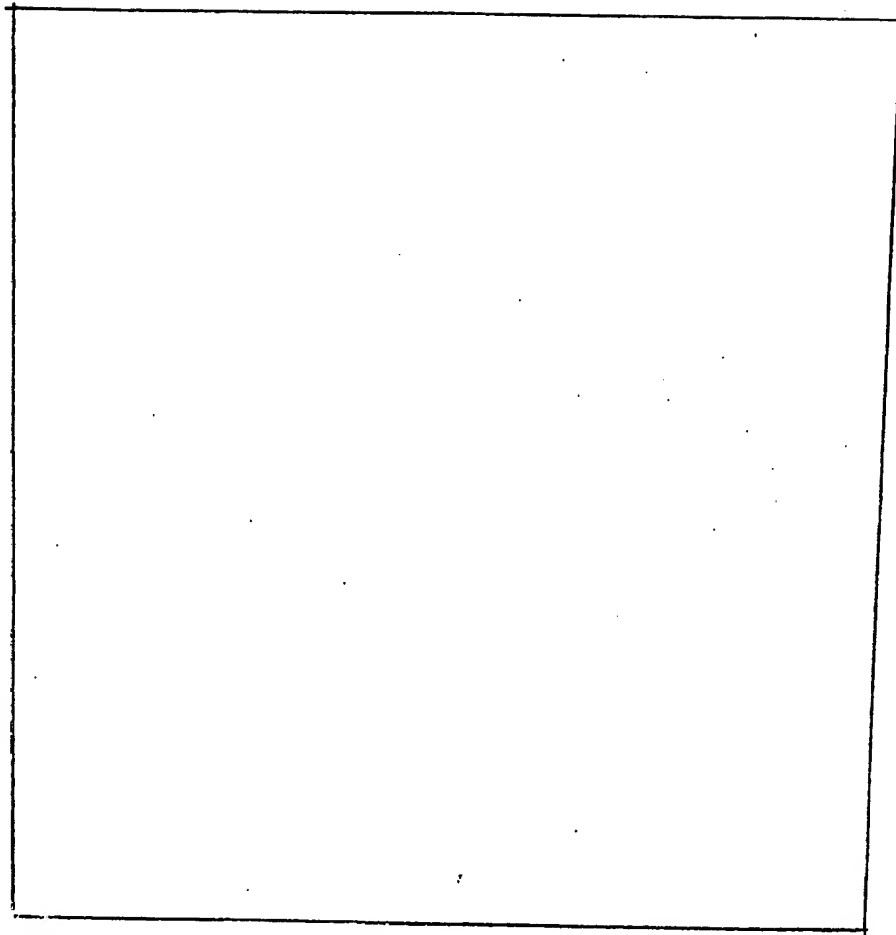


FIGURE 1A

WOOL SIDE OF THE VELCRO

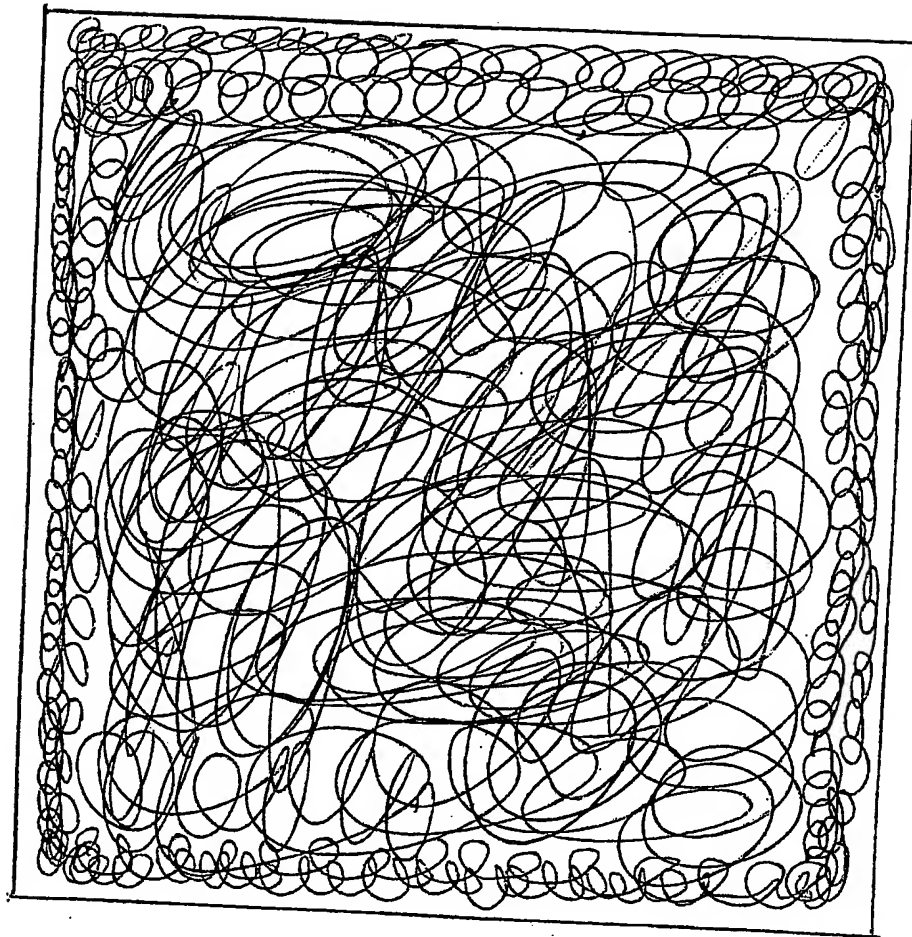


Figure 1B

WORKPANTS SHOWING THE KNEE AREA PLACEMENT OF THE
IRONED ON PATCH WITH WOOL VELCRO

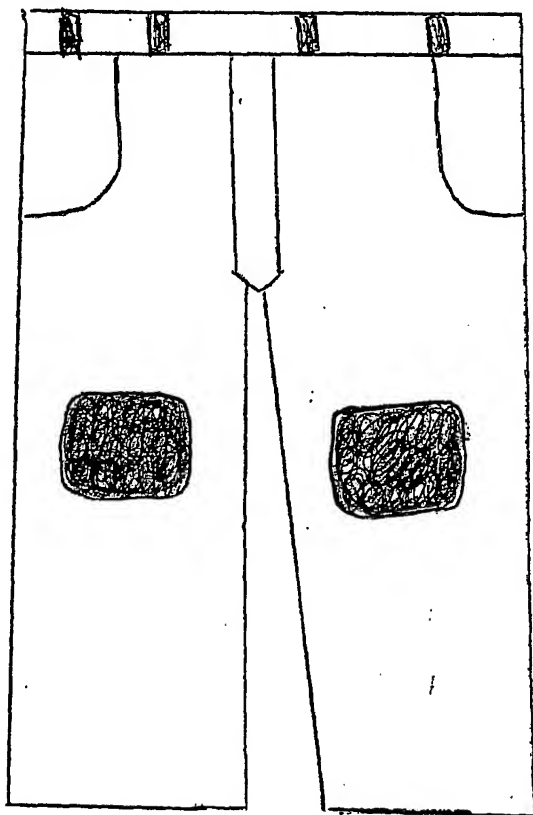


Figure 1C

FRONT VIEW OF THE FOAM KNEE PAD

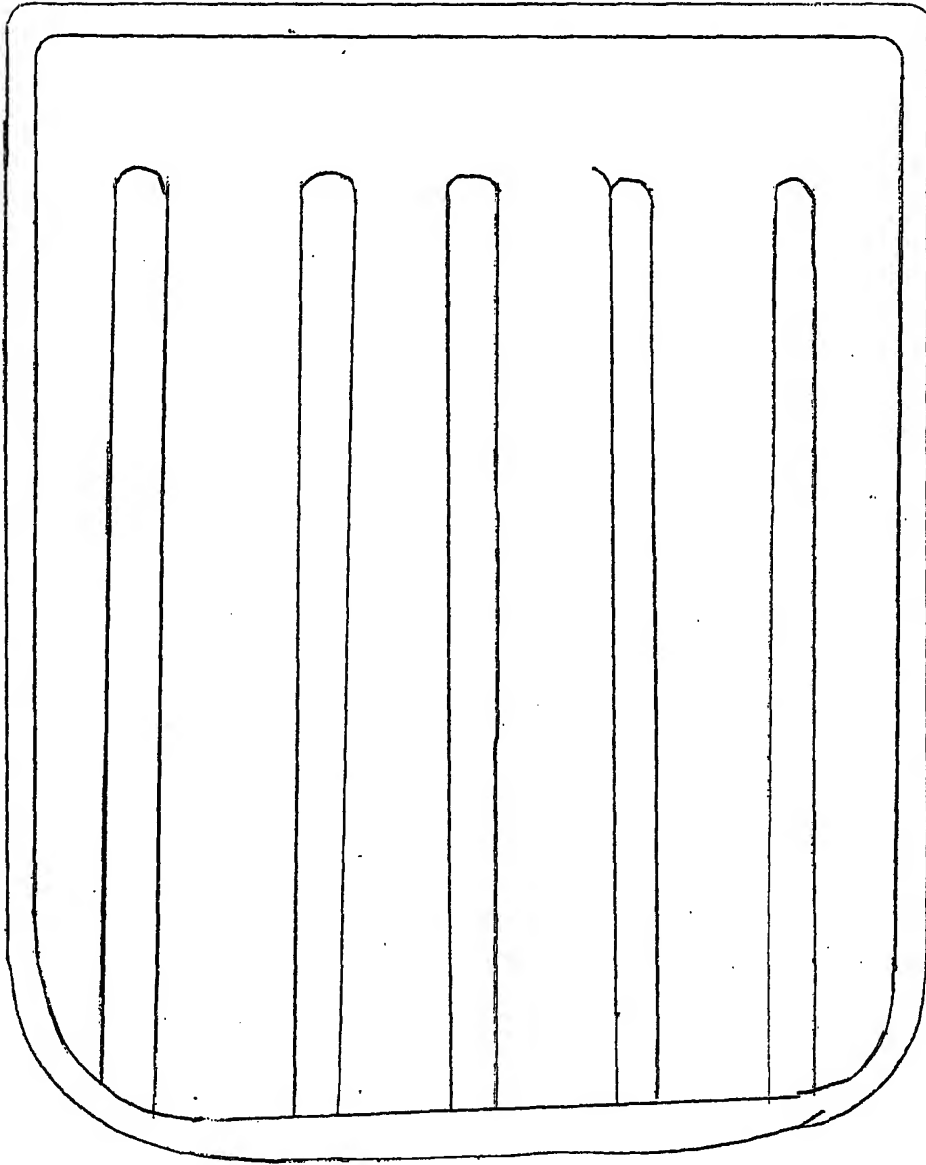


Figure 1D

SIDE VIEW OF THE FOAM KNEE PAD

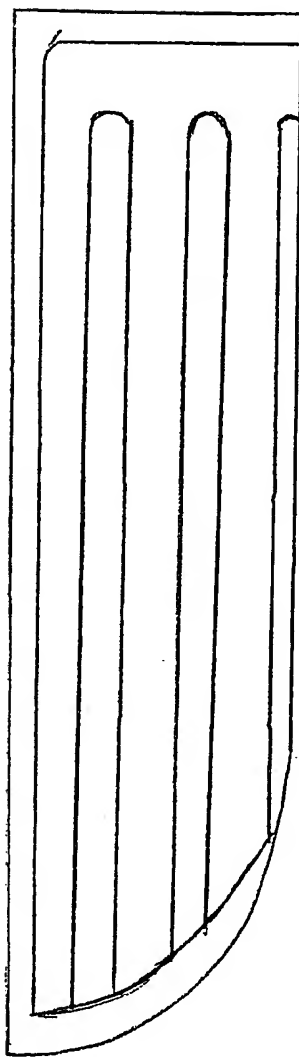


Figure 1E

A BACK VIEW OF A FOAM KNEE PAD WITH PLASTIC SIDE OF THE VELCRO SEWN INTO
THE KNEE PAD

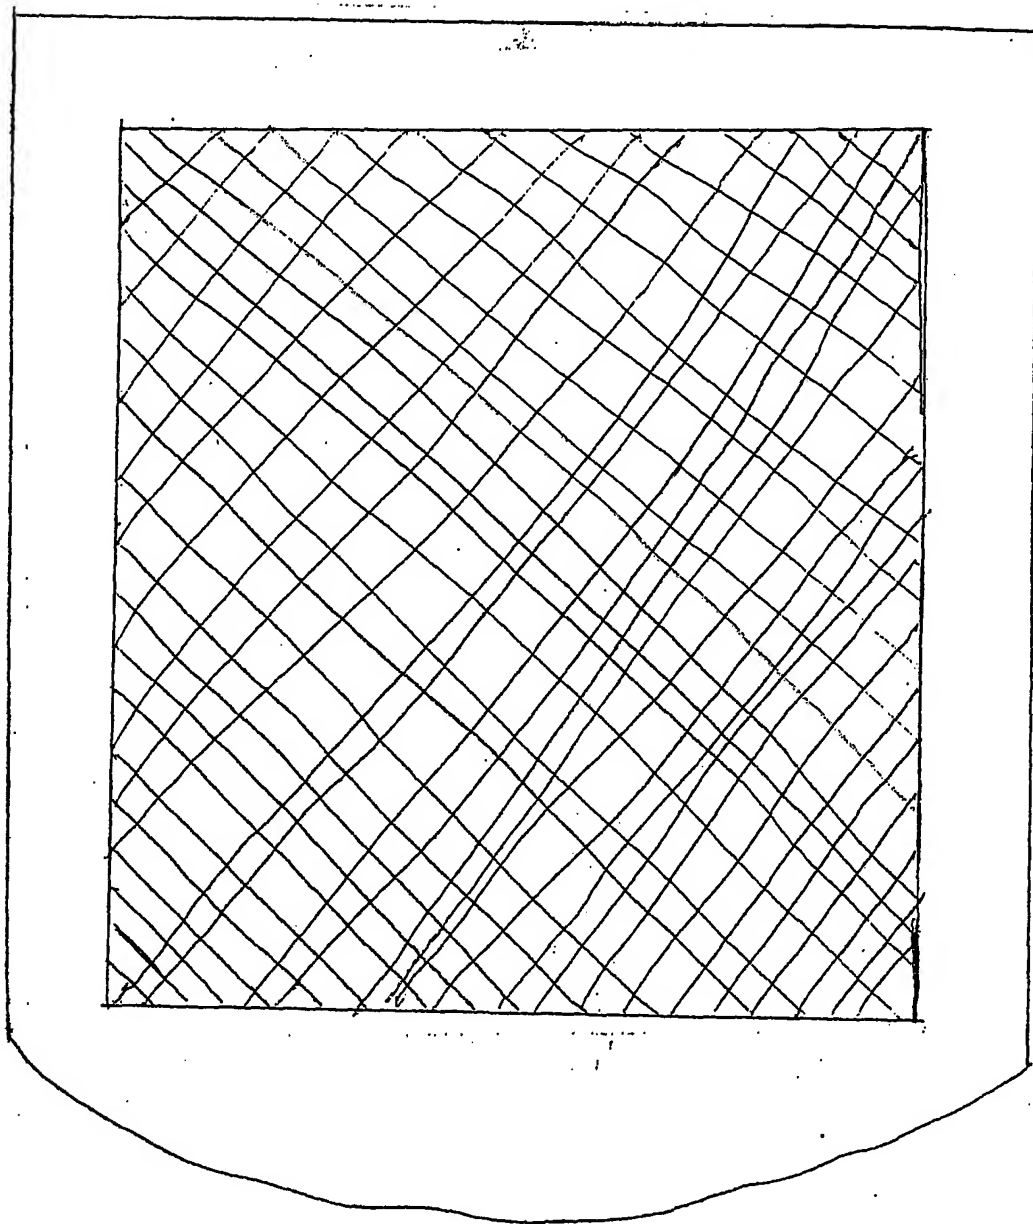


Figure 1F

BACK, SIDE, AND FRONT VIEW OF THE KNEE PAD



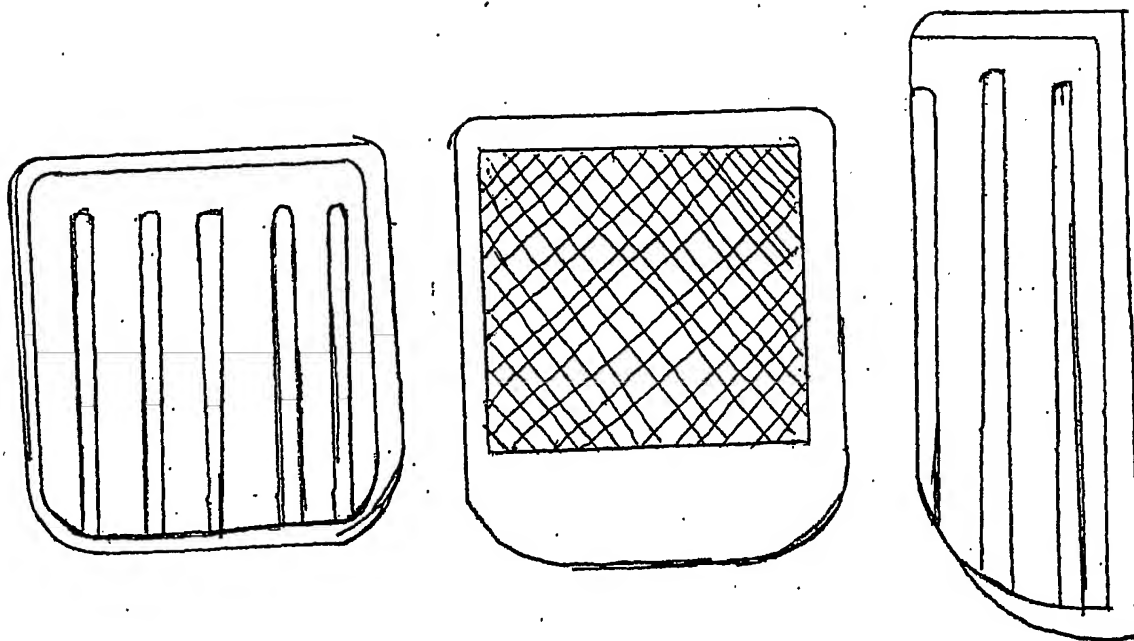


Figure 1G

THE PLASTIC SIDE OF THE VELCRO THAT WILL BE SEWN INSIDE OF THE
KNEE PAD

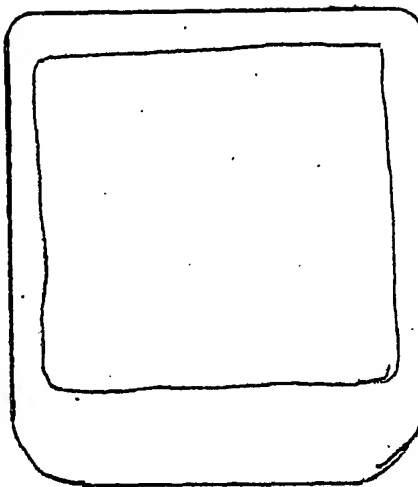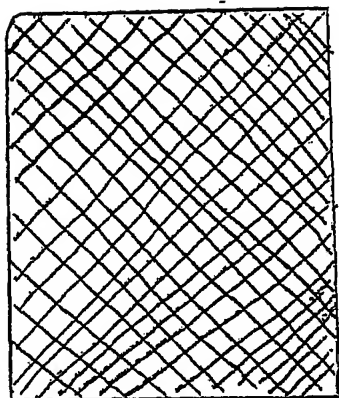

WOOL SIDE OF THE VELCRO THAT WILL BE SEWN ONTO THE IRON ON PATCH

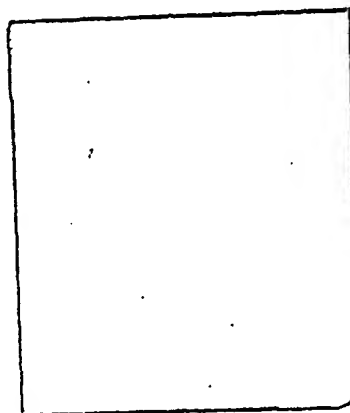
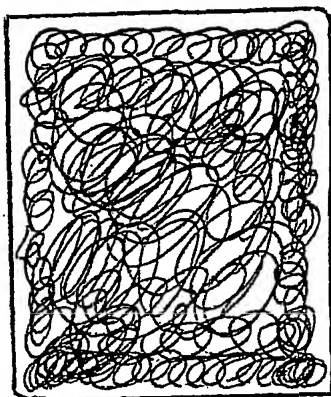


Figure 1H